

GUIDE

# How to set up the Sensor Kiosks on Kaiterra Dashboard



#### INSTRUCTIONAL GUIDE

This guide and content is for informational purposes only. Please read and follow all manufacturer installation, usage, and safety manuals and instructions.

Copyright © 2023 Delos Living LLC. All rights reserved.

## What is a Kiosk view:

Kiosk View is an easy way to display your sensor data without logging into the Kaiterra platform. It shows air quality measurements by each sensor and cycles through all the installed sensors every 10 seconds. You can share the permanent link to your employees or other stakeholders to see the sensor data and a snapshot of air quality in their building or room.

- Visit <https://dashboard.kaiterra.com/login>
- Log in with your user credentials

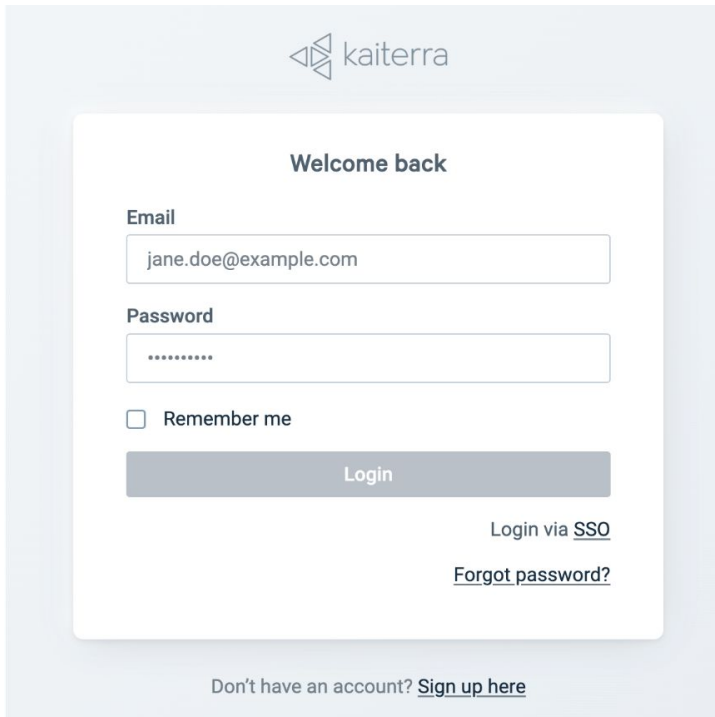


Image 5.1

- On the main dashboard, click on “Kiosk View” on the menu bar

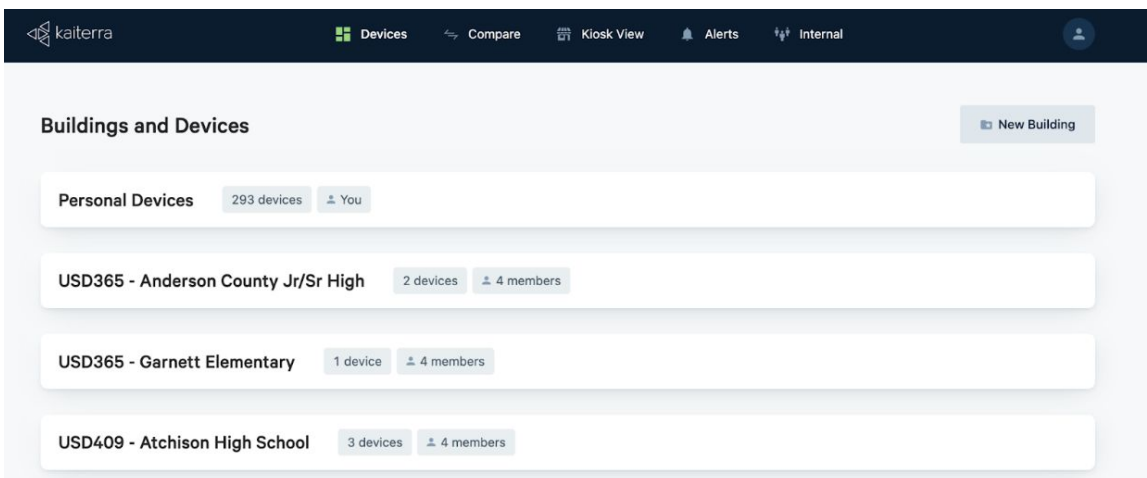


Image 5.2

- Click on “Create a Kiosk”

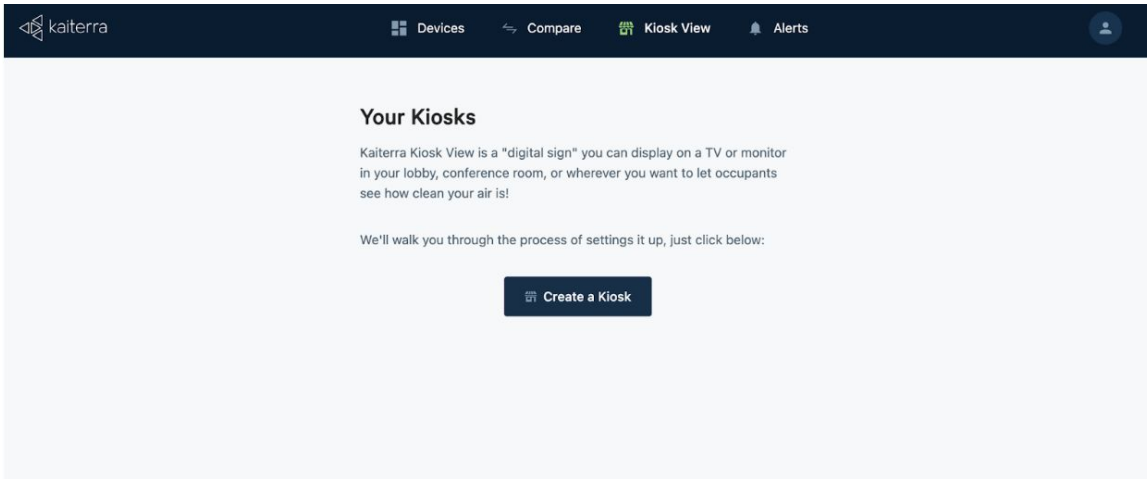


Image 5.3

- Create a name for the Kiosk (District #\_School Name)
  - USD 123\_ABC School
- Select “Air Quality” mode
- Select “Single indoor devices or average”

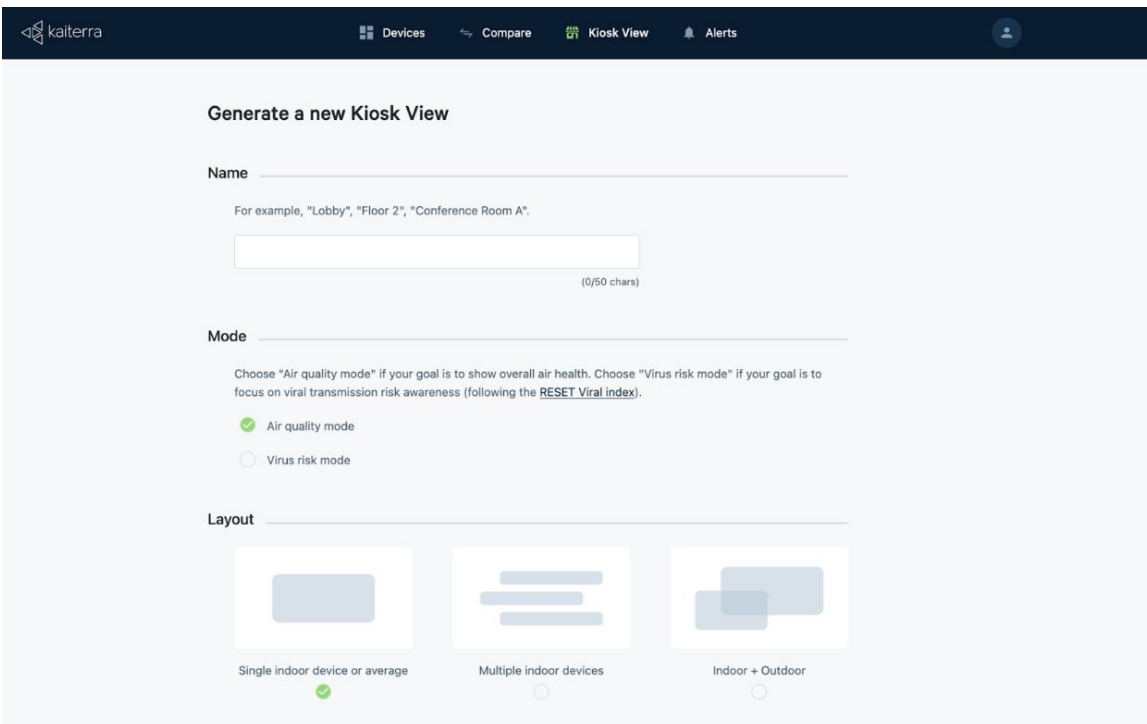


Image 5.4

- Select “Light” or ”Dark” as the Theme, based on your personal preference
- Under “Devices”, click “Open device picker”

**Theme**

Kiosk View has two display themes: Light and Dark.

Light: bright background with dark elements on top, suitable for a bright room.

Dark: dark background with muted colors, suitable for a dark room.

**Devices**

You can select a single device, or up to 8 devices to average.

[Open device picker](#)

**Carousel mode**

Enable carousel mode to display each device individually as a slideshow

Disable carousel mode ⓘ

Enable carousel mode ⓘ

Transition interval (seconds)

10

**Parameters to display**

Select at least one device first.

[Cancel](#) [Create](#)

Image 5.5

- Click the drop-down button of your school and select the sensors associated with that school, then click “Select” when done

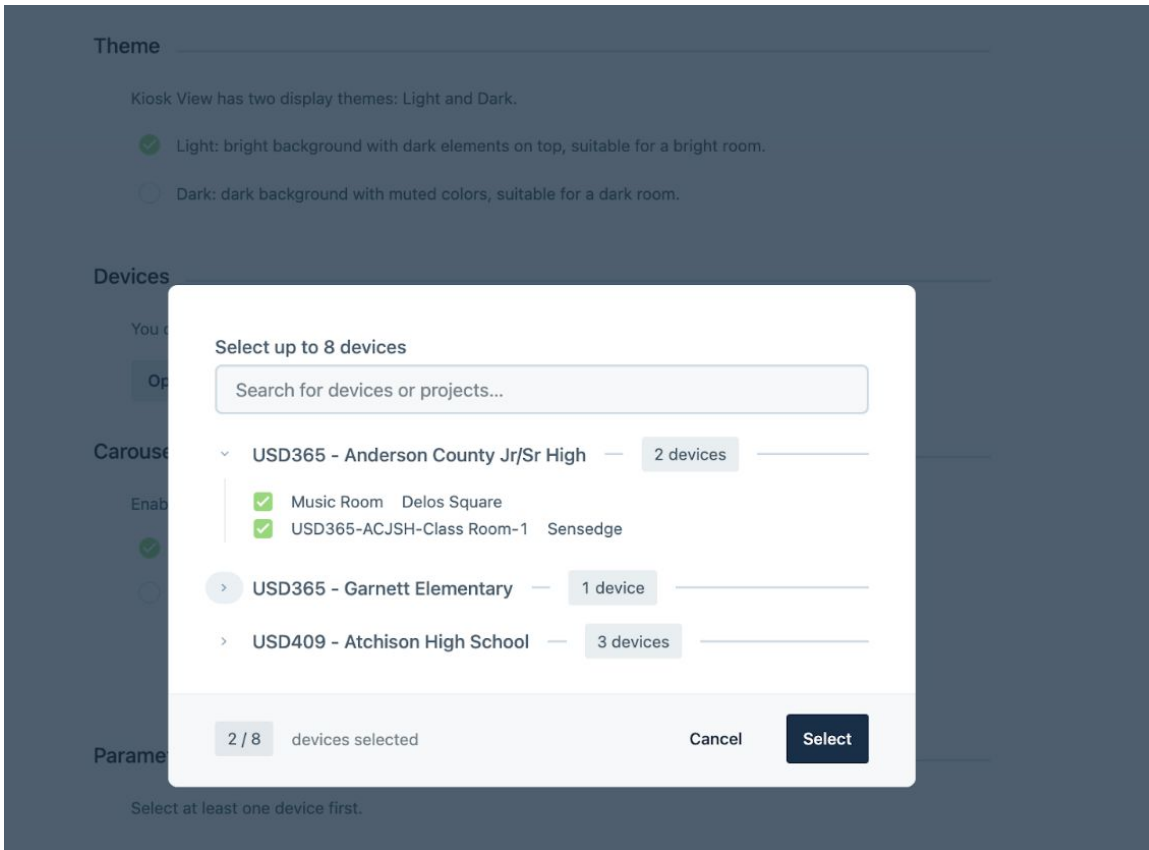


Image 5.6

- Under "Carousel mode", select "Enable carousel mode" and set the transition interval to 10 seconds
- Un-check "RESET Viral Index", keeping the rest of the parameters checked
- Click "Create" to save the kiosk view

**Carousel mode**

Enable carousel mode to display each device individually as a slideshow

Disable carousel mode ⓘ

Enable carousel mode ⓘ

Transition interval (seconds)

10

**Parameters to display**

Select up to 8. Only the selected parameters will be displayed and included in the overall air quality reading.

- CO<sub>2</sub>
- Humidity
- PM<sub>10</sub>
- PM<sub>2.5</sub>
- RESET Viral Index
- Temperature
- TVOC
- Show current time

Cancel **Create**

Image 5.7

- You will see the Kiosk that you just created
- To view your dashboard, click on the arrow at the bottom right of the school name
- To share the Kiosk View with others, click the chain button in the bottom right corner of your kiosk to copy the link. You can then send the link to your colleagues via email, text message, or another messaging app.

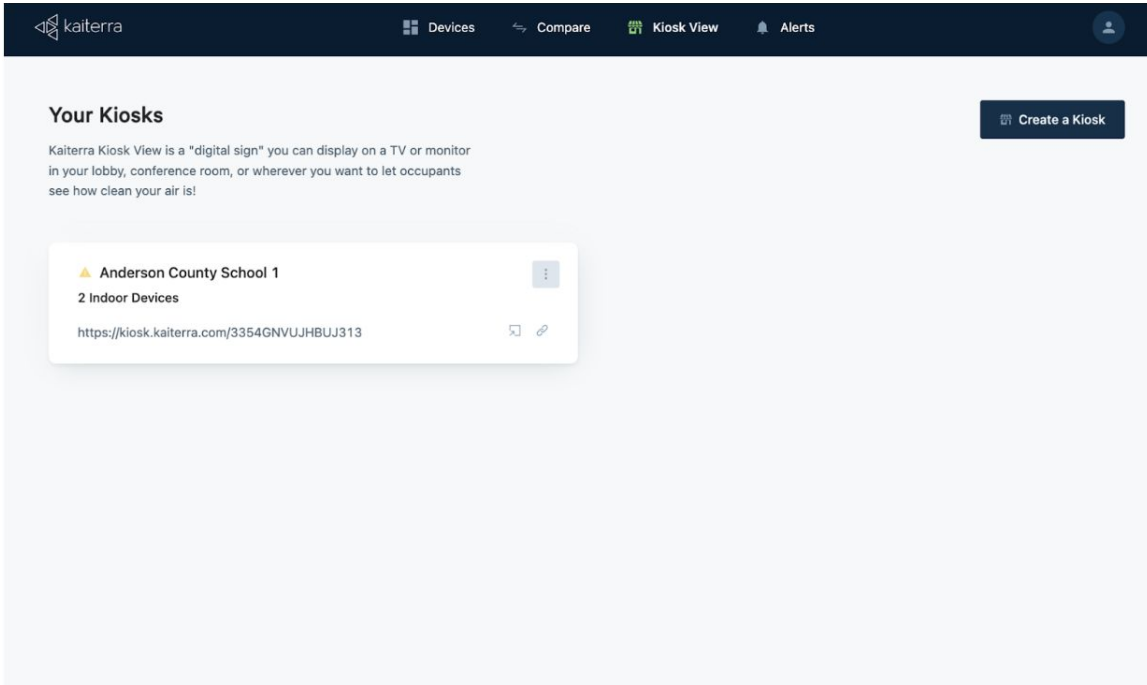


Image 5.8

Additional Questions?  
email [support@delos.com](mailto:support@delos.com) to learn more



Delos is the trademark or registered trademark of Delos Living LLC in the United States and/or other countries. All other trademarks, service marks, trade names and logos used herein are the property of their respective owners. Copyright © 2023 Delos Living LLC. All rights reserved